


triton 1/2" Precision Router SPARE PARTS LISTING

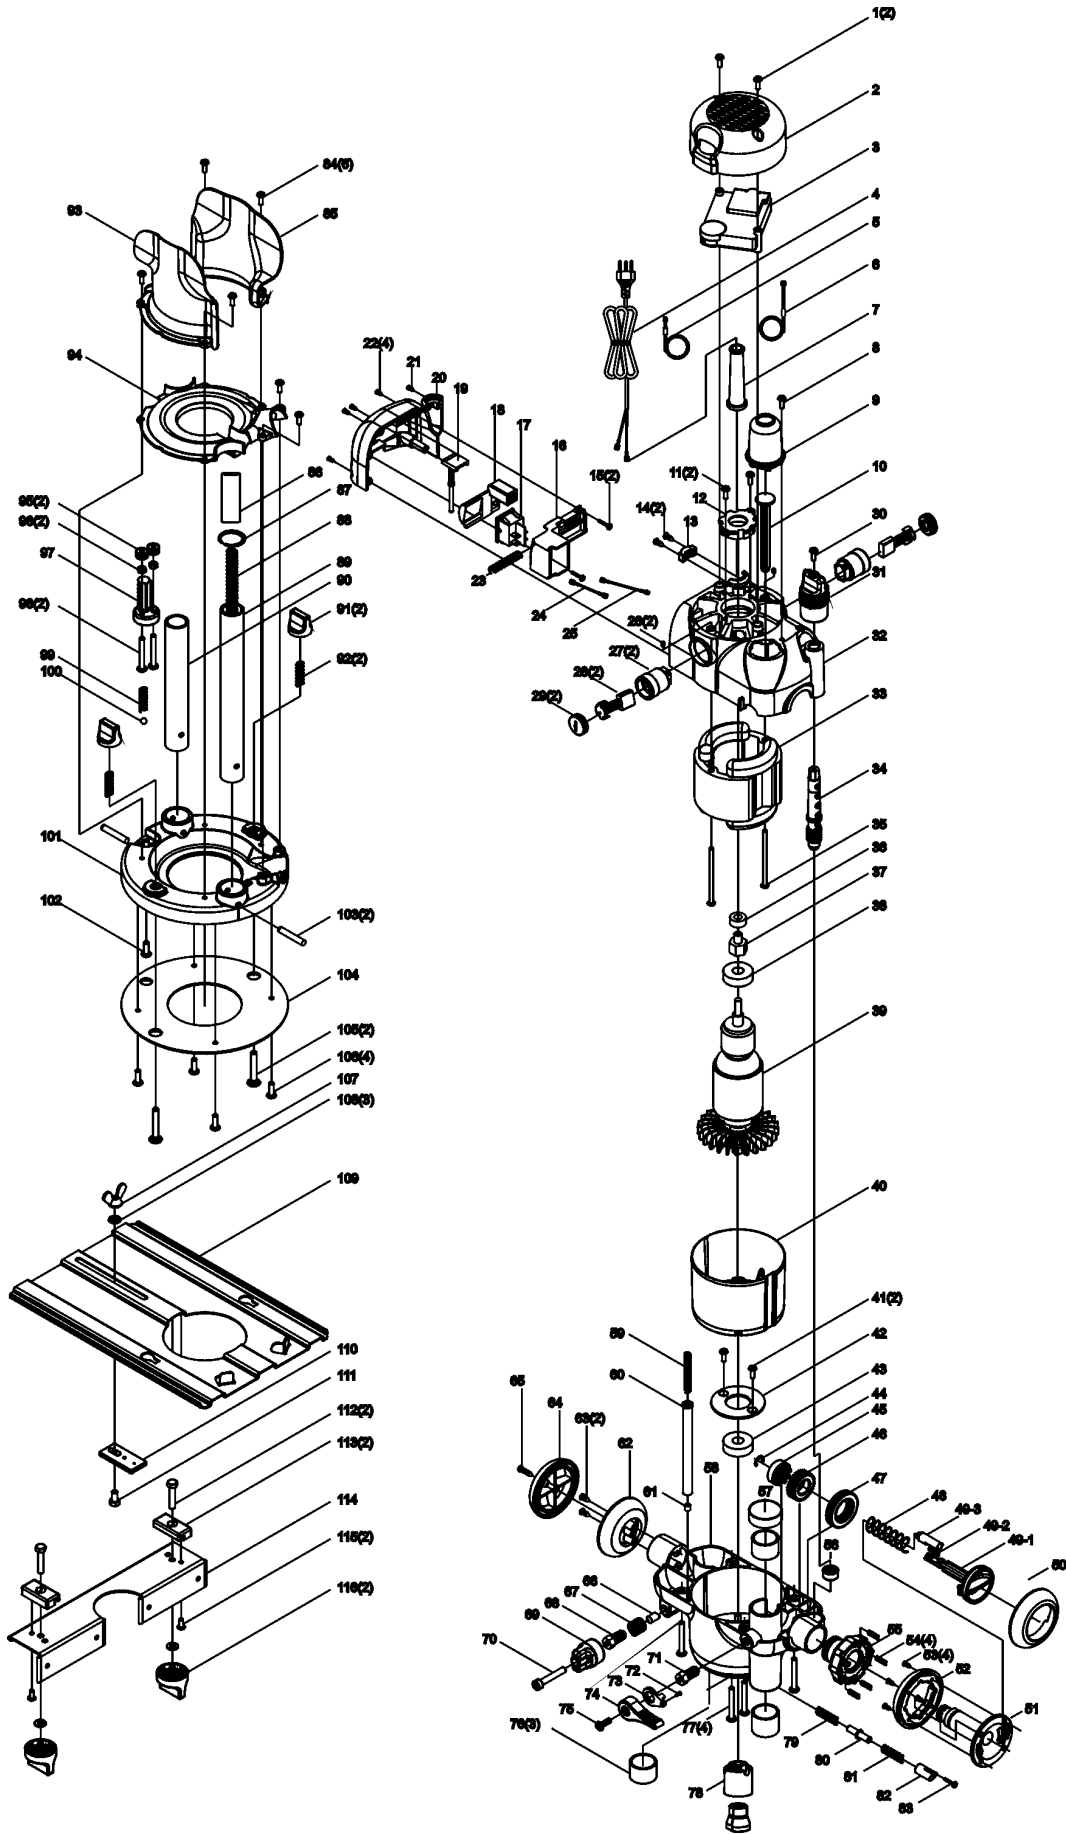

Item No.	Part No.	Description	Item No.	Part No.	Description
1	TRA067	Screw, motor top cover	62	TRA046	Fixed handle inner
2	TRA007	Motor top cover	63	TRA093	Screw, fixed handle inner
3	TRA027	Speed controller	64	TRA045	Fixed handle outer
4	TRC057	Plug and cord	65	TRA094	Screw, fixed handle outer
5	TRA068	Brush connection B	66	TRA032	Depth stop brass plug
6	TRA069	Brush connection A	67	TRA133	Depth stop knob spring
7	TRA018	Cord relief	68	TRA049	Bolt, plunge lock
8	TRA070	Screw, rack post cap	69	TRA134	Depth stop knob
9	TRA053	Rack post cap	70	TRA135	Depth stop screw
10	TRA065	Guide, rack post spring	71	TRA049	Bolt, plunge lock
11	TRA071	Screw, upper armature bearing plate	72	TRA098	Screw, plunge lock lever plate
12	TRA016	Upper armature bearing plate	73	TRA050	Plate, plunge lock lever
13	TRA017	Cord restraint	74	TRA048	Plunge lock lever
14	TRA072	Screw, cord restraint	75	TRA099	Screw, plunge lock lever
15	TRA073	Screw, switch mount	76	TRA051	Bush, rack and smooth posts
16	TRA019	Switch mount	77	TRA101	Screw, motor body
17	TRA054	Switch	78	TRA013	Chuck Assembly
18	TRA020	Slide cover, switch	78.1	TRA102	Chuck body
19	TRA034	Guide, depth stop spring	78.2	TRA103	Chuck inner
20	TRA006	Housing cover, switch end	79	TRA104	Spring, shaft lock (inner)
21	TRA074	Screw, switch cover, short	80	TRA026	Pin, shaft lock
22	TRA075	Screw, switch cover, long	81	TRA105	Spring, shaft lock (outer)
23	TRA076	Spring, switch cover	82	TRA025	Button, shaft lock
24	TRA077	Connecting wire, brown	83	TRA106	Screw, shaft lock button
25	TRA078	Connecting wire, blue	84	TRA107	Screw, chip shield
26	TRA079	Screw, brush holder	85	TRA022	Chip shield, rear
27	TRA056	Brush holder	86	TRA108	Liner, rack post
28	TRA055	Brush	87	TRA109	Snap ring, rack post
29	TRA080	Cap, brush holder	88	TRA110	Spring, rack post
30	TRA081	Screw, micro adjust knob	89	TRA010	Rack post
31	TRA035	Micro adjust knob	90	TRA011	Smooth post
32	TRA005	Upper motor body	91	TRA064	Knob, fence attachment
33	TRA003	Field	92	TRA111	Spring, fence attachment knob
34	TRA036	Worm shaft, metric	93	TRA021	Chip shield, front
35	TRA082	Screw, field	94	TRA023	Vacuum shield
36	TRA083	Magnet ring	95	TRA030	Turret wheel
36&37	TRA127	Magnet ring & mount assembly	96	TRA112	Nut, turret wheel
37	TRA084	Mount, magnet ring	97	TRC028	Turret
38	TRA085	Upper armature bearing	98	TRA113	Screw, turret wheel
39	TRA002	Armature	99	TRA114	Spring, turret
40	TRA024	Fan shroud	100	TRA029	Turret detent ball
41	TRA086	Screw, lower armature bearing plate	101	TRA008	Base
42	TRA015	Lower armature bearing plate	89,90,101,103	TRA125	Base & post assembly
43	TRA014	Lower armature bearing	102	TRA115	Screw, turret pivot
44	TRA087	E ring	103	TRA116	Roll pin, posts
45	TRA044	Clutch plate	104	TRA009	Base plate
46	TRA043	Plunge pinion	105	TRA117	Coach bolt, fence attachment
47	TRA037	Worm wheel, metric	106	TRA118	Screw, baseplate
48	TRA088	Spring, plunge selector	107	TRA119	Wing nut, circle cutter
49.1	TRA040	Plunge selector	107 to 111	TRA128	Fence plate & circle cutter assembly
49.2	TRA132	Spring	108	TRA120	Washer, circle cutter
49.3	TRA131	Plunge selector rear	109	TRA059	Fence plate
50	TRA038	Plunge handle outer	110	TRA063	Circle cutter pivot
51	TRA041	Plunge handle shaft	111	TRA121	Bolt, circle cutter
52	TRA039	Plunge handle inner	112	TRA122	Bolt, fence slide clamp
53	TRA089	Screw, plunge handle	112 to 116	TRA126	Fence assembly
54	TRA090	Spring, release ring	113	TRA061	Fence slide clamp
55	TRA042	Release ring	114	TRA060	Fence slide face
56	TRA047	Bush, metric worm	115	TRA123	Screw, fence slide clamp
57	TRA091	Reinforcing ring	116	TRA062	Knob, fence slide clamp
57, 58, 76	TRA052	Lower motor body & bush assembly	117	TRA129	1/4" reduction collet
58	TRA004	Lower motor body	118	TRA124	1/2" cutter
59	TRA092	Spring, depth stop	119	TRA066	Spanner
60	TRA033	Depth stop tube	-	PUC526	Instruction Manual
61	TRA058	Plug, depth stop tube			